


ECO TURTLE PUMP MAINTENANCE



3134-ECU-P-14(N.O)-X1

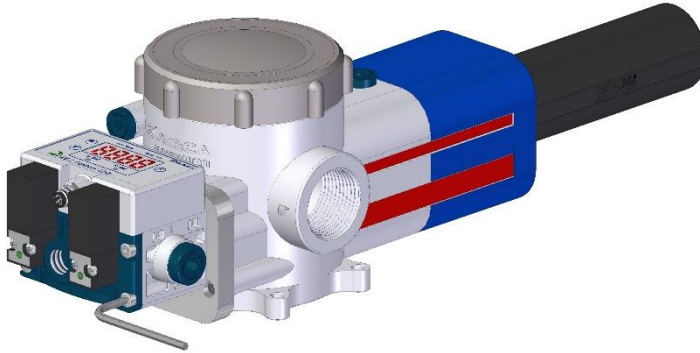

1




Use wrench to release the bolts that combines the end cap with the Eco Control Unit.

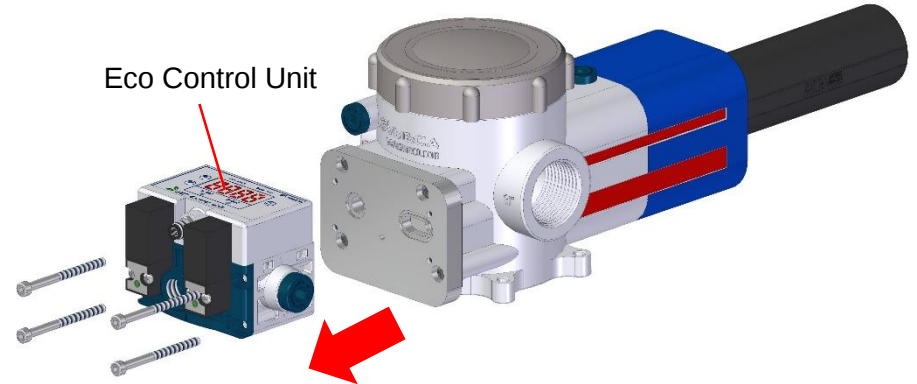
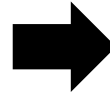


After releasing the bolts, disconnect the Eco Control Unit.

2



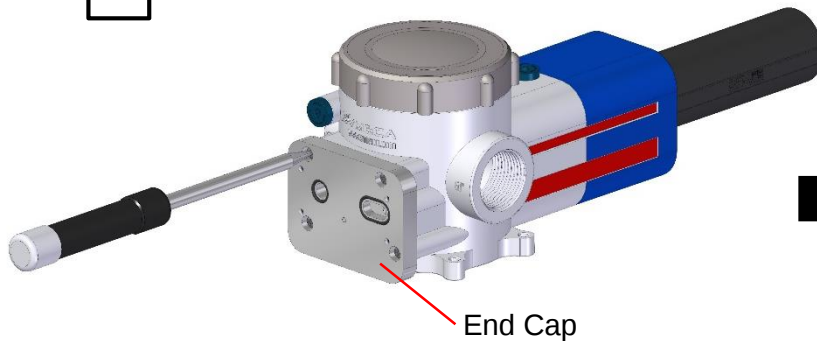


Use a cross-head (+) screwdriver to release the bolts on the End Cap

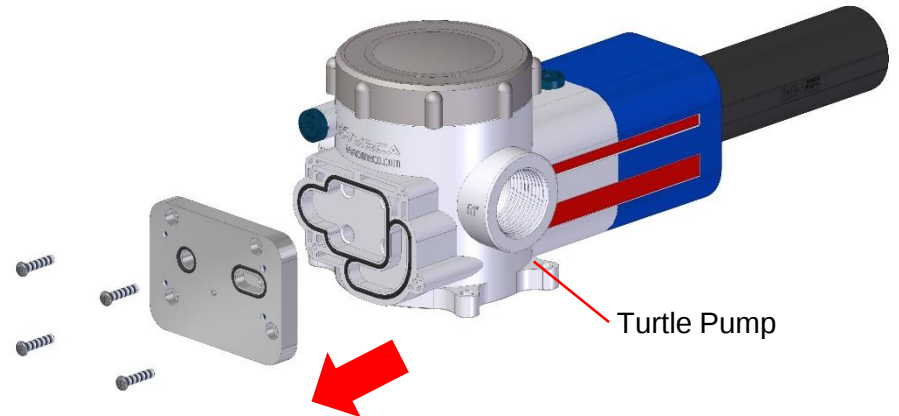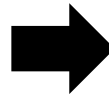

Disconnect Bolt and End Cap from Turtle Pump.


3

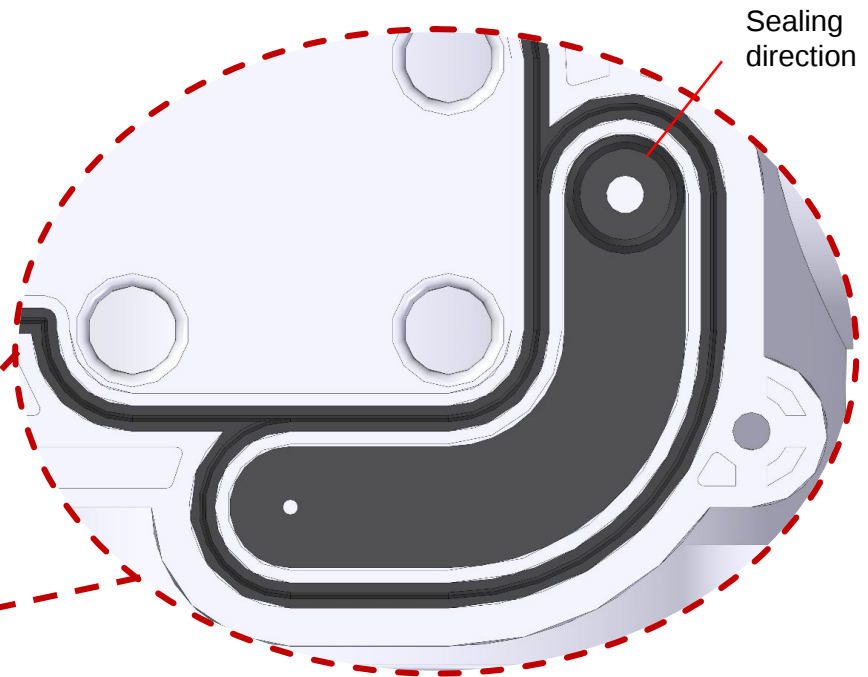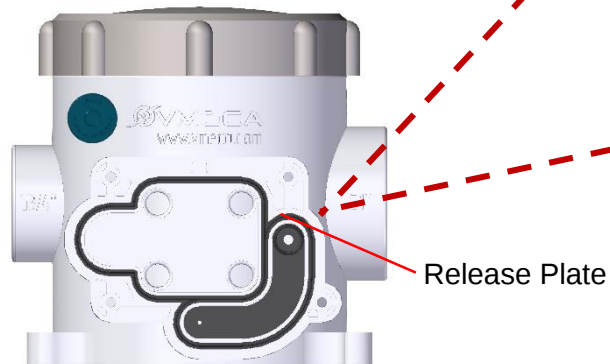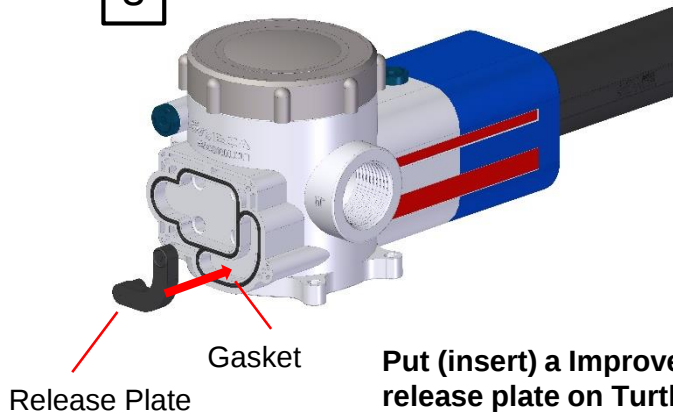

* Be careful about the sealing direction when assemble the release plate.


4

Assembly

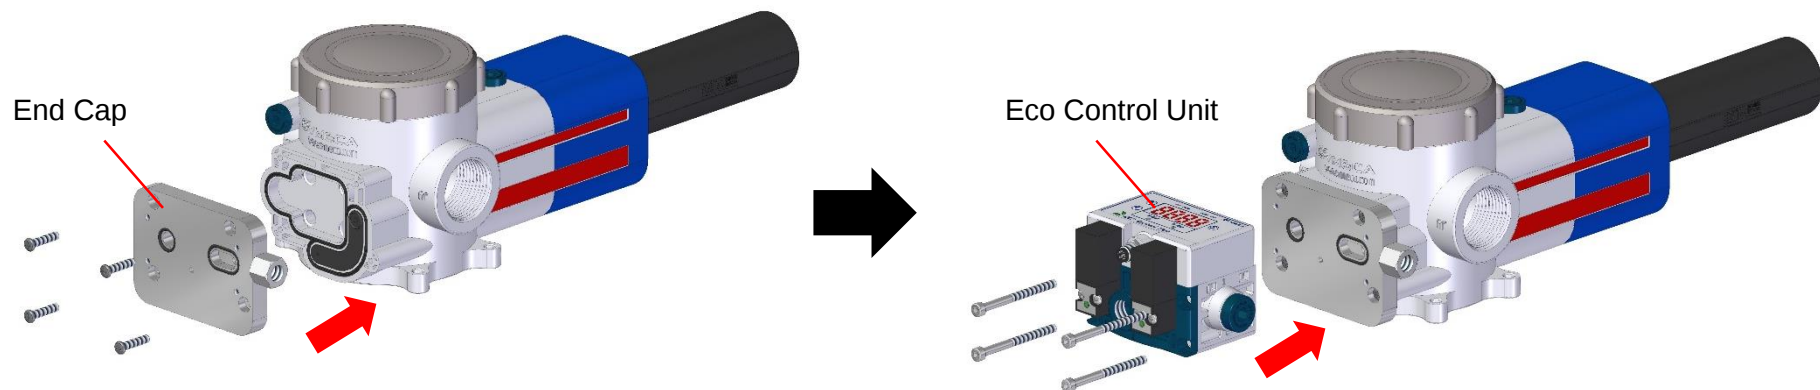

Firstly install a new (improved) End-cap, a part of 3134-ECU-P-14(N.O)-X1 with Turtle Pump.

And assemble the Eco-Control Unit with screws.

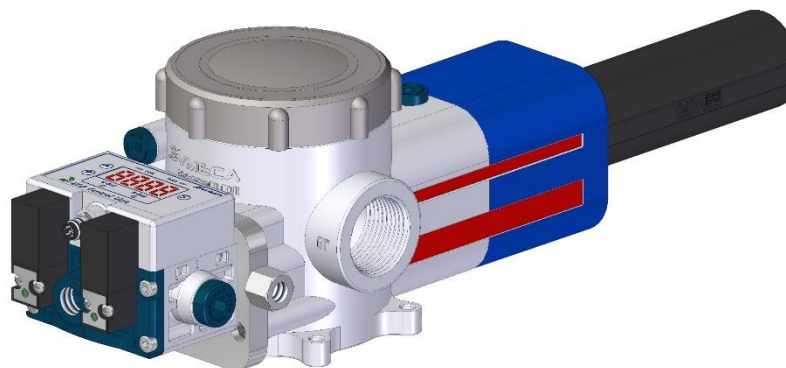

Complete (Finished)

5

Connection of Release-air Line (Recommend)

